
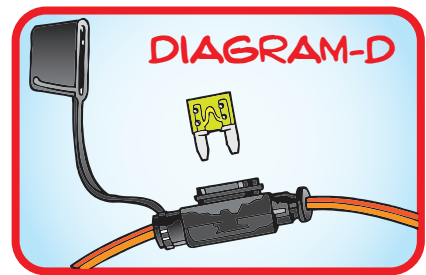
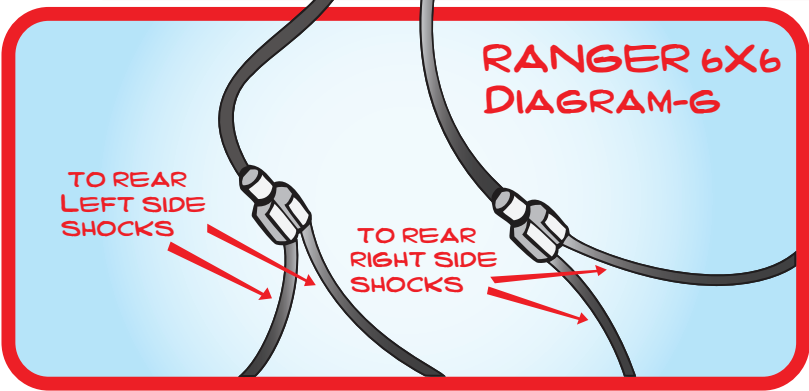


ROUTE AIR TUBING

STEP THREE: D



CONNECT THE FRONT GAUGE BY TAPPING INTO THE TUBING GOING TO ONE OF THE FRONT SHOCKS USING THE Y-CONNECTION. TAP INTO ONE OF THE REAR SHOCKS TUBING TO CONNECT THE REAR GAUGE.

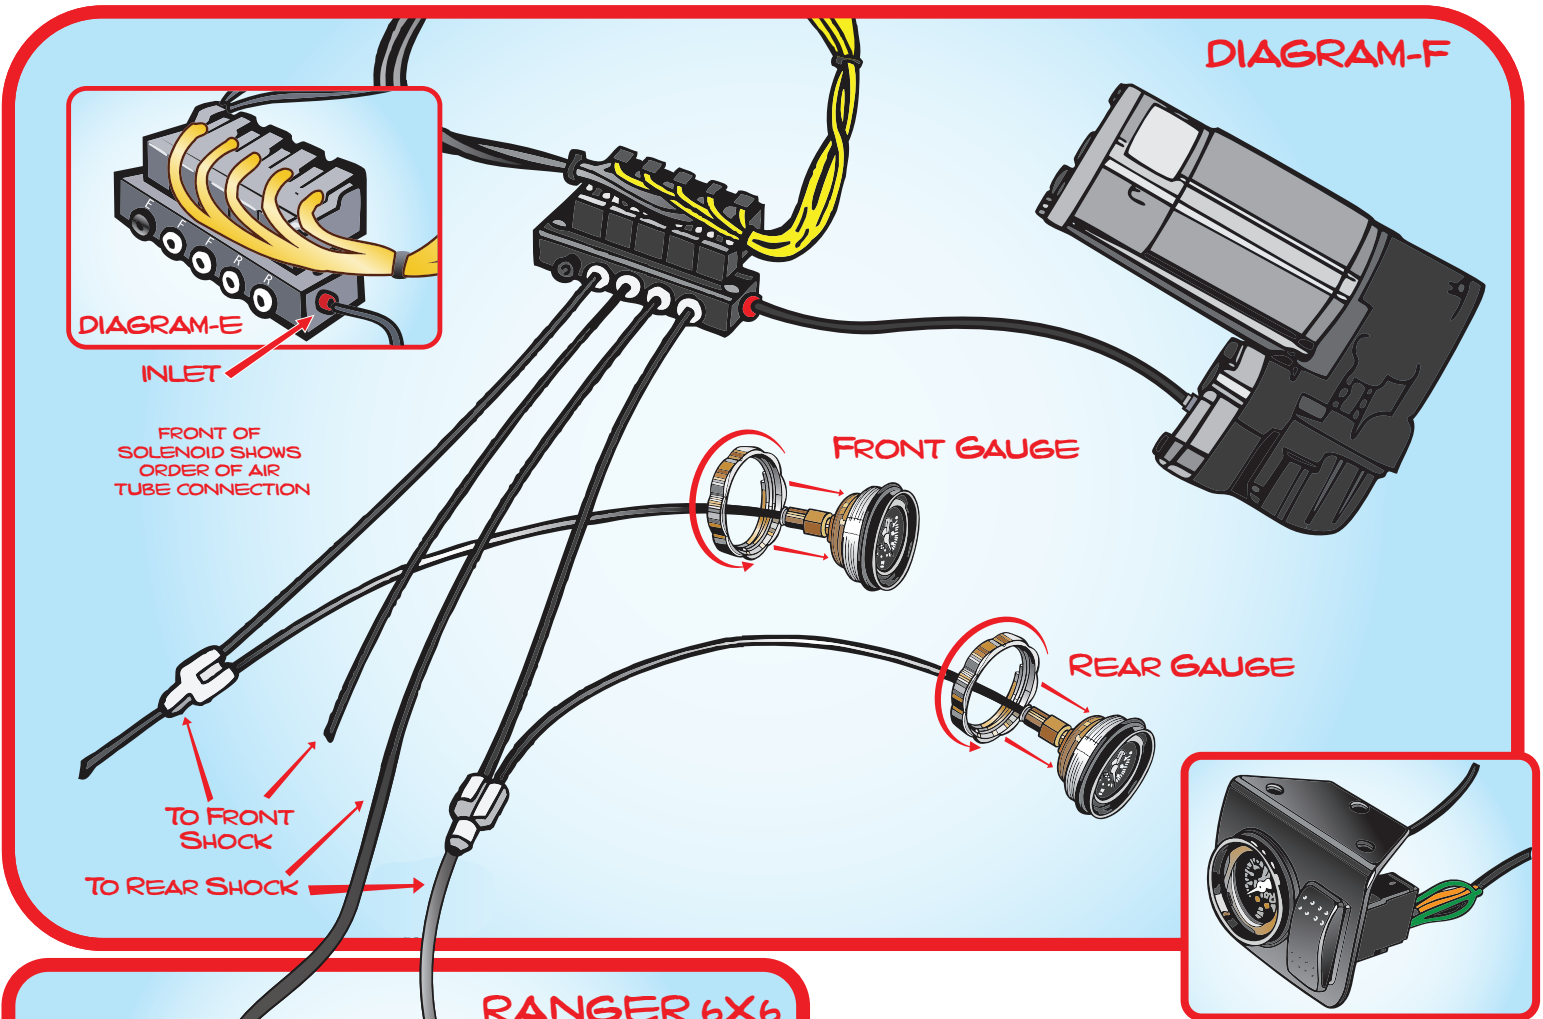

STEP TWO: D
INSTALL FUSE IN FUSE HOLDER

STEP THREE: A

CAREFULLY CUT AIR TUBING AT A 90° WITH A SHARP BLADE.

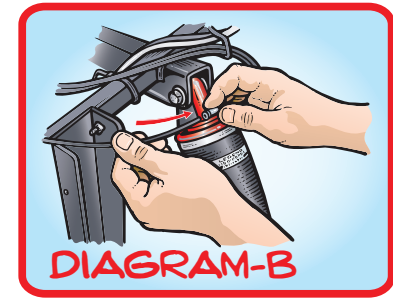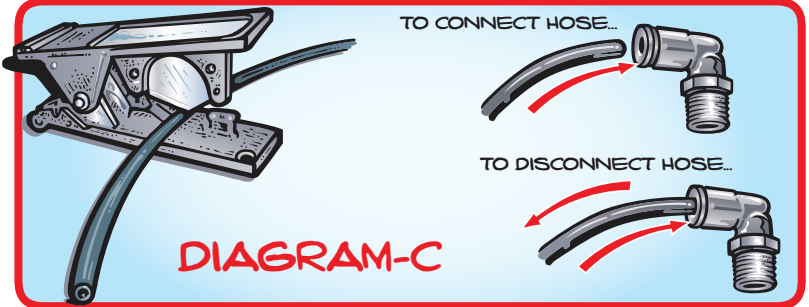

STEP FOUR: D
REMOVE THE PLUG IN THE SHOCK-FITTINGS AND INSERT THE AIR TUBING ROUTED TO EACH SHOCK.